



Versatile
IP communications
with a SIP phone, router,
and SHDSL modem in
one device



Bittium Tough Comnode™ is a robust IP communication device designed for tactical networks. The device can be used for several purposes, for example as SIP phone, router, and SHDSL modem, which makes it highly versatile for various field/tactical communication needs.

Bittium Tough VoIP Service™ can be run on the device to provide telephony and SIP server functionalities to other VoIP devices for accessing the VoIP network.

The device can run various services, such as messaging service and dynamic routing. The device can also be used as a platform for third-party services.

Benefits

The same device acts as a terminal, switch and router

Small and rugged form factor – easy to install anywhere and truly portable in the field

Extensive connectivity with e.g. CNR interface, field wire, LAN, USB, Wi-Fi, Bluetooth®

Full military grade IP communications with distributed VoIP service and wide range of codecs

Dynamic routing capabilities improving network reliability



Use case examples


Rugged VoIP Phone in the field for wired (field wire/ETH) and wireless (Wi-Fi) connections



Gateway between CNR radio network and VoIP service



Intercom usage together with Bittium Tough VoIP Service™

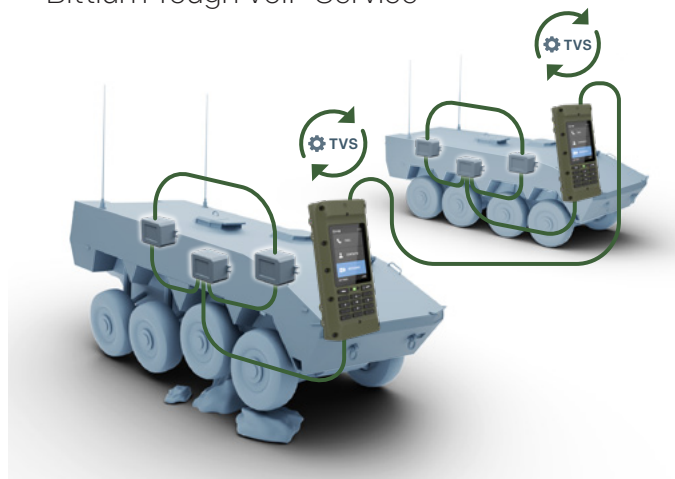


SHDSL network **access point**



Blue force tracking application for legacy CNR radio



Fully independent **tactical IP network** and interoperability with tactical IP networks

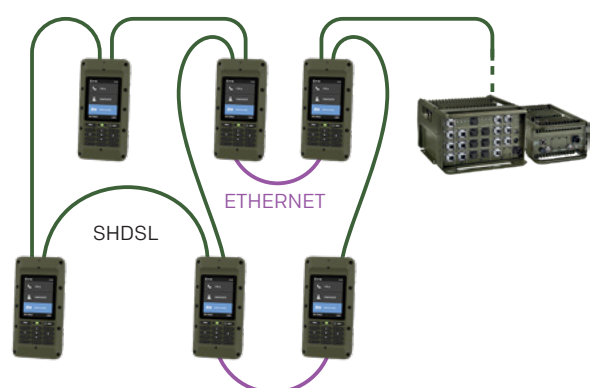

Features

- Supports all Bittium Tough VoIP Service™ functions either by direct dialing codes or from the graphical user interface
- Custom OLSR in tactical networks
- OSPF/BGP for external connections
- Automatic IP address configuration
- QoS: traffic classifying and priority queues
- Supports connectivity to 3rd party SIP servers.
- LDAP phonebook, either directly loaded to device memory, or used remotely over selected network
- Linux firewall and Linux user management system, all users can have their own user ID's
- Push-to-talk (PTT)
- No service requiring parts such as battery inside the unit
- On/off-hook detection

Device management

- Web user interface for device configuration
- Easy and quick setup of multiple devices via configuration file
- Remote SW update
Software upgrade through web-based management
- Remote management support via Bittium Tactical Network Management™
- Representational State Transfer over https (REST-API)

Physical interfaces

- **Power**
12 – 32Vdc
- **Audio/serial**
Audio interface for connecting handset/headset/CNR, incl. two serial ports and push-to-talk signals
- **LAN**
Two 10BASE-T/100BASE-TX interfaces with PoE 802.3af input
- **USB**
USBv2.0 host port and USB power input
- **SHDSL**
Two ITU-T G991.2 (G.SHDSL) interfaces, push-and-release connector for field wire

Wireless interfaces

- GPS
- WLAN 802.11 bgn
- Bluetooth®

Device interfaces

- **Status LED**
- **Display**
Large, TFT LCD full color display
Size: 3.5 inches diagonal
Resolution: 320 x 240 pixels
- **Keypad**
2 function keys below the display, 12 number keys
- **Buzzer**
Buzzer for ringtone

Technical specifications

- **Signalling protocols**
SIP (RFC 3261) over UDP/TCP/TLS
SDP (RFC 4566)
Presence event package (RFC 3856)
- **Voice signaling**
RTP/RTCP (RFC 3550)
Telephone events (RFC 2833)
- **Phonebook**
LDAP (RFC 451)
- **Audio codecs**
G.711, G.729AB, GSM, Speex, MELPe 2400
- **Environmental and EMC standards**
MIL-STD-810H
MIL-STD-461G
MIL-STD-1275E
- **Power supply**
Power consumption 7W (device), max. 7.5W USB power feed
Power input 12 – 32 VDC, alternative power inputs are LAN (PoE) and USB
- **Operating temperature range**
-40 °C / +55 °C
- **Ingress protection class**
IP67, also for open connectors
- **Dimensions**
183 x 90 x 30 mm, without handset and handset holder
- **Weight**
580g, without handset and handset holder
- **Material**
Surface treated aluminum alloy/plastic
- **Declaration of conformity**
CE, FCC, IC

Accessories

- 9400088 Bittium Tough Comnode Audio Extension™
- Bittium Tactical Power Pack™
 - 9305310 Adapter Power Pack
 - 9304758 Battery SDR HH
 - 5501070 Comnode Power Pack interface cable
- 9304639 Handset
- 9304602 Handset Holder
- S0000033744, Headset Peltor Comtac VIII Single-COMM
- 9304911 Mounting Plate (wall/table)
- 9304967 Mounting Plate (wall/table) with audio extension
- 9101670 Equipment Bag
- Cables

Comnode product code: 9404092

Item is subject to export control law (EU2021/821): 5A002.a.2 dual-use item